
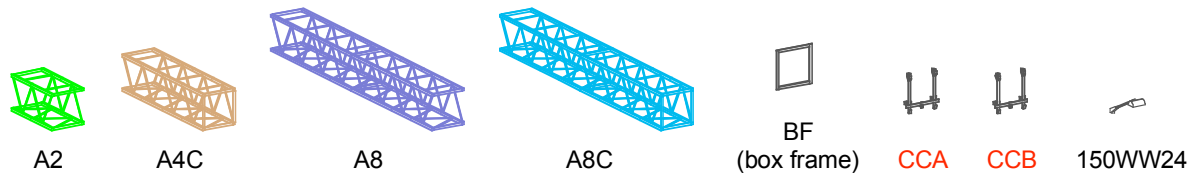


NOTES

Assemble central tower first, then assemble wing sections.

8' horizontal attaches to center of top 4' section.

Box frame attaches between CCB bracket and header frame.

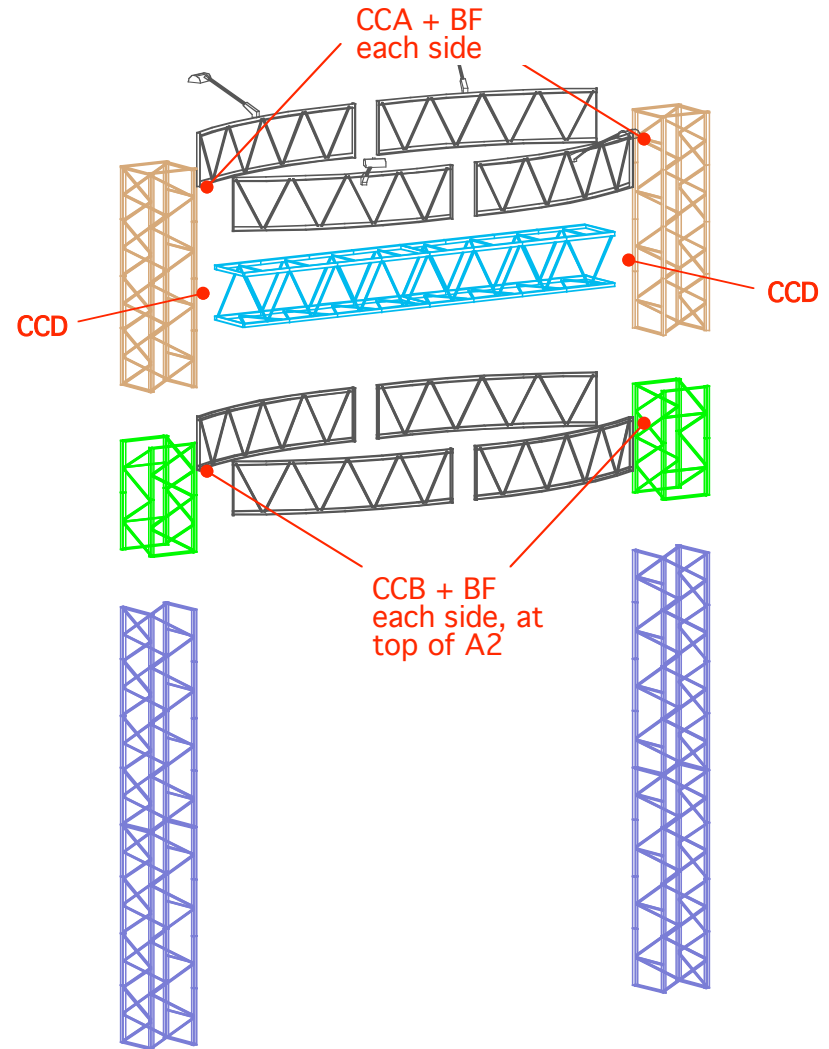

DRAWN BY: NG

DESIGN : EZ12 RUBY ASSEMBLY, Page 1 of 2

DATE: 5/08

REFERENCE: 20x20

© Trussworks 2008

The designs shown herein are the proprietary property of Trussworks and protected by copyright and other laws. This document is to be maintained in confidence. No portion of the information or design shown herein may be reproduced, electronically or otherwise, nor may any display be made from this design without written consent from Trussworks.

